



MESSAGE BATHTUB
MODEL:EMPV-67JT351LED



Introduction

you for choosing our massage bathtub series. We provide a 3 years warranty after–sale service upon purchase of our products. If you need any assistance during this process, please contact a local distributor or our company directly. To use our products safely and effectively, please read these instructions carefully. Improper installation, operation, or maintenance will cause damage to the products and will result in an additional repair fee. Please note that we reserve the right to change this manual without prior notice. Due to the difference between general market requirement and our individual custom product, please refer to the corresponding content in this manual according to the chosen product and its functions. By doing so, you can correctly install and operate the product according to its specfic features.

- In order to correctly install and maintain the product, please pay special attention to the warning sign below.

This symbol indicates that errant handling after disregarding this symbol could result in personal injury or property loss.


- In order to install, use, and maintain this product correctly and safely, please read these instructions thoroughly.
- This manual is a valuable source of product information to help the user handle the product safely and correctly. Please put it in a safe place where it cannot be lost or soiled.

Preparation before installation

- Make sure the area in which you install the bathtub is strong enough to bear the total weight of the bathtub, maximum water volume, and the user.
- The installation area must be waterproofed, otherwise the downstairs area below the bathtub will get damaged if water leaks.
- The installation area must be equipped with water supply, power supply, and drai nage:

External circuitry is equipped with high sensitive and fast type leakage protection switch. (Induced current rating below 15MA; trip time should be less than 0.1 second; rated current is above 30A.)
Notice *The product should be installed alongside ground and electric leakage switches by a licensed electrician.

- Please reserve the drainage hole $\geq 2.0''$, make sure the drainage pipes match the water valve.
- The user needs to reserve 1/2" external thread cold and hot water hose connectors that protrude 1.18 inches from the wall. It is recommended to install a valve on each pipeline; the installation positions shall be planned by the user for easy maintenance.
- Because each bathroom or bathtub's power and drain are slightly dierent, please place the bathtub in an optimal location according to its surroundings. The following illustration may be used as a reference layout:

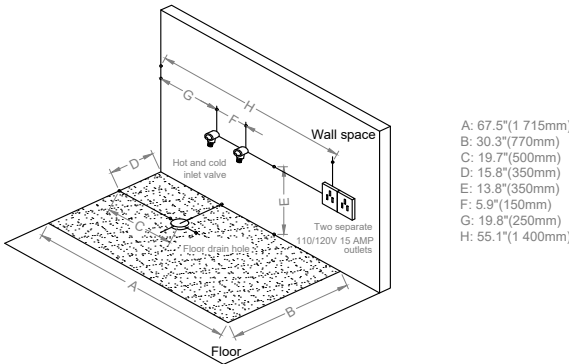

A: 67.5"(1 715mm)
B: 30.3"(770mm)
C: 19.7"(500mm)
D: 15.8"(350mm)
E: 13.8"(350mm)
F: 5.9"(150mm)
G: 19.8"(250mm)
H: 55.1"(1 400mm)

The safe distance between power supply and water supply should be at least 11.8 inches.

Inspection Before Installation

1. Be careful when removing the bathtub from its packaging so as to avoid contact with any harsh surfaces. Remove the staples or fold them into the box. Additionally, it is advisable to lift the bathtub by its rim during handling to minimize any risk of damage. Retain the packaging box until the satisfactory installation of the product has been ensured.
2. Conduct a thorough inspection of the bathtub components and skirts. In the event that any damage or defect is detected in the nish, refrain from installing the bathtub. Please note that any damage or defect claimed after installation is not covered by the warranty. The responsibility for shipping damage terminates once the carrier has delivered the products in good order.
3. Any claims for damage should be referred to the carrier. For a comprehensive understanding of the warranty coverage and its limitations, please refer to the published three–year warranty section in this manual.

Before beginning your installation, please take note of the following guidelines:

1. Compliance with all local and building codes is mandatory.
2. Determine the necessary tools required for the installation.
3. Install drain/overow per the manufacturer's instructions and the Technical Specications Manual. It is the installer's responsibility to ensure a water–tight installation of the drain. Any drain leakage is not covered by the bathtub warranty.
4. Install the faucet and shower head at this stage (if applicable). It is recommended that a qualied plumber installs the faucet. Please see additional notes on freestanding section for faucets.

- a). It is the installer's responsibility to properly install the spout plumbing and ensure compliance with local codes.
- b). We do not warrant connections of water supply ttings and piping systems, or drain/overow systems. Neither are we responsible for any bathtub damage that occurs during the installation process.
- c). Additional bathtub drain parts and plumbing are commercially available at plumbing and hardware stores.
- d). A non–ammable protective barrier must be placed between the bathtub unit and any soldering work to prevent bathtub damage.


- Please check whether all parts are intact. Please contact our company with any concerns or questions.
- After inspection, immediately dispose of unneeded packaging. If left, this packaging may cause injury from any carelessly placed wooden frames, nails, cardboard, or sealing straps.
- In addition, please do not let children play with the packing material.

- This equipment is designed for indoor use only. Use supply wires that are suitable for 167°F (75°C), including the temperature rating of the supply conductors to be used. This unit should be electrically grounded and installed by a licensed contractor, electrician, and plumber.
- Parts containing live elements (except parts supplied with safety extra–low voltage not exceeding 12 V) must be inaccessible to a person in the bath.
- Earthed appliances must be permanently connected to fxd wiring. The terminal compartment includes a green–colored terminal or a wire connector marked with "G", "GR", "GROUND", or "GROUNDING". To reduce the risk of electric shock, connect the terminal or connector to the grounding terminal of your electric service or supply panel with a conductor equivalent in size to the circuit conductors supplying the equipment.
- Parts incorporating electrical components (except remote–controlled devices) must be located and fxd so that they cannot fall into the bath.
- With the exception of specified power, please do not use alternate power. This can cause fre or electric shock.

- An electrical leakage protection switch should be installed outside the bathroom. If this switch is not installed, fre or electric shock can occur.
- Do not use a broken power supply, power plug, or the loose socket. These may cause fre or electric shock.
- Do not modify the power supply cord. Also avoid using it with an extension cord or combining it with other equipment using multiple plugs. Doing so could lead to shocks, overheating, or fre.
- Please make sure the power is connected to the terminal box and it requires two separate 15A Dedicated GFCI Circuits.
- Building materials and wiring should be routed away from the motor/pump or blower or other heat–producing components of this unit. A pressure wire connector is provided on the exterior of the motor/pump and heater to permit connection of a No. 8 AWG solid copper bonding conductor between this unit and all other electric equipment and exposed metal in the vicinity, as necessary to comply with local regulations.

- Before the installation is complete, protect the bathtub from damage.
- Do not use open flames near or in the bathtub (such as a lighted cigarette).
- Do not stand on the bathtub while working. Doing so could cause one to slip and fall, or crack and otherwise damage the product.
- Install securely in accordance with the Installation Manual. Improper installation can lead to water leaks that damage or ruin household property. After the installation is completed, the product should undergo trial operation to ensure that it has been installed properly.

Size chart

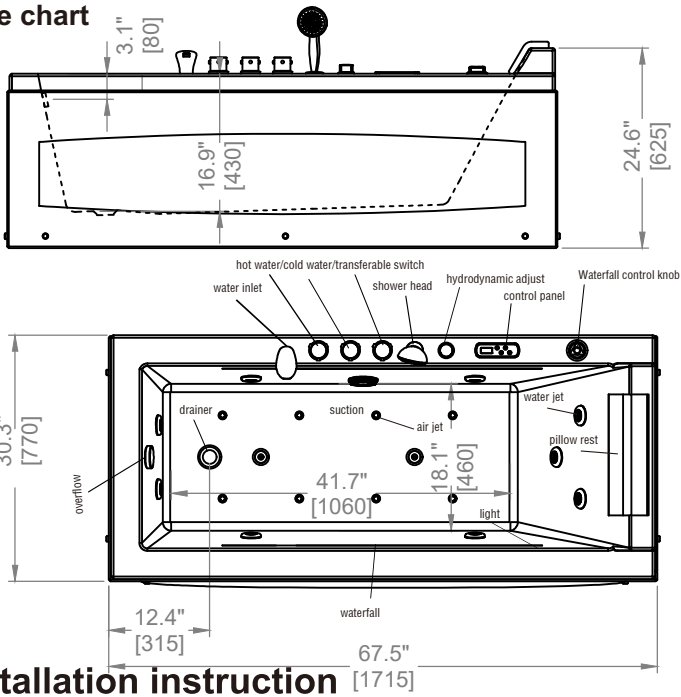


Installation instruction

Testing Before Installation

- there may be some loose hose connections due to transport. You should water test the product again before installation. The steps are as follows:
- a. Place the tub on a at surface in an area where it may be drained after testing. Adjust the feet to make the bathtub level.
 - b. Check if anything is loose within the connection system.
 - c. Fill the tub with water to the overflow and allow it to sit for 10 minutes. During this time, inspect the tub for leaks.
 - d. Inspect all joints visually for any signs of leaks. If any leaks are detected, do not proceed with the installation of the bathtub.
 - e. Insert the plug, turn on all functions for a few minutes (i.e., massage, air bubble, waterfall, and other features), and inspect the tub completely. Any defect must be reported to your dealer/distributor prior to installation in order to have it covered under warranty.


- Adjust the leveling feet
- We designed several leveling feet to adjust the bathtub. Please use a wrench or level ruler to level the bathtub.
- Note: If the bathtub is not level, it may lead to
- one or all of the following:
- noise increase
 - excess water in the hoses or the drainage
 - bathtub shaking

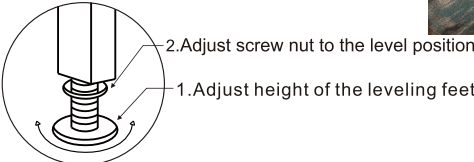

Installation instruction


How to connect the water ?

For ease of use, our bathtub is equipped with stainless steel cold and hot water hoses (connector $\varnothing$ 1/2"). Please connect the cold and hot water hoses to the bathroom's cold and hot water hoses accordingly. Before connect bathtub water inlet pipe, first open water pipe for a period of time, then put filter screen to ensure that the debris will not enter the bathtub pipe. So that we can effectively extend the life of the fitting.

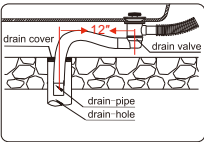

The drain pipe is 31.5" long and the ground drain should be 12" away from the bathtub drain so that the drainpipe can form an S-bend for odor isolation

Insert the drain-pipe to the drain-hole on the floor, and then cover it with water retaining cover to prevent waste water spilling.

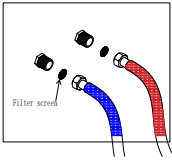

The red hose is the hot water hose, and the blue hose is the cold water hose. The drain–pipe should be installed with a slope above 1:50.

Notice: Do not hold the drain–pipe and cold/hot water hoses when moving the bathtub, and do not crash it with hard objects.

- How to connect the electricity?
User needs to purchase two separate 110/120V 15amp plugs and install the proper dedicated plug with a ground electrode to the power line. Then insert the plug frmly.
Note: This product uses universal home power. External circuitry is equipped with high sensitive and fast type leakage protection switch. (Induced current rating below 15MA; trip time should be less than 0.1 second; rated current is above 30A.)

The product should be installed alongside ground and electric leakage switches by a licensed electrician.

Make sure the ground is connected. One side of the ground should be connected to the ground terminal of the motor and the stainless steel frame; the other side should be connected to the ground wires of the plug.

The bathtub must be connected to the ground. The power outlet must be sealed well. Make sure the surface of each wire is intact.

Precautions for use

Please refer to the model and configuration you have chosen when using the product.

- Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. Do not tamper with user–operated controls or any similar devices.
- Do not immerse the control panel by overfilling the bath.

To avoid injury, exercise caution when getting in and out of the hydro massage bathtub. Cleaning and user maintenance shall not be performed by children without supervision.

Do not permit children to use this unit unless an adult closely supervises them at all times. Supervision is also required when an elderly or handicapped individual uses the whirlpool bath.

During the early months of pregnancy, pregnant or possibly pregnant women should consult a physician before using. Excessive water temperatures have a high potential for causing fetal damage. People with a medical histories of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using a whirlpool.

The use of drugs or alcoholic beverages before or during whirlpool use may lead to unconsciousness with the possibility of drowning.

The water in a whirlpool should never exceed 104°F (40°C). Water temperatures between 100°F (38°C) and 104°F (40°C) are considered safe for a healthy adult. Prolonged immersion in hot water may lead to HYPERTHERMIA, so the use time should be limited to approximately 30 minutes, followed by a shower to cool down. Lower water temperatures are recommended for extended use (exceeding 10–15 minutes) and are highly recommended for younger children. If you become nauseous, dizzy, or develop a headache, get out at once and become nauseous, dizzy, or develop a headache, get out at once and cool down. Get medical attention if symptoms persist. Check with a physician before using whirlpool again.

- Persons using medication should consult a physician before using a whirlpool. Medication may induce drowsiness or affect heart rate, blood pressure, and circulation.

- Do not operate this unit without the suction cover over the suction fitting. Keep body and hair a minimum of 6" (152 mm) away from the suction fitting at all times when the pump is running.
- Do not use a hydro massage bathtub equipped with a heater immediately following strenuous exercise.
- Never drop or insert any object in any opening within the whirlpool. Never operate electrically connected devices in or near the bath. No electric appliances (i.e., hair dryer, lamp, telephone, radio, television, etc.) should be within 5 feet (1.5 meters) of this bathtub.

This bathtub is designed for "fill and drain" use, which means the bathtub needs to be drained after each use and refilled with fresh water for the next bath. This is a health precaution, as these bathtubs are not designed to hold water continuously, like pools or spas. Close the drain and fill the bathtub until water is at least 1" to 2" (25 mm to 51 mm) above the highest jet or air inlet (as indicated by water line in the right diagram). Do not turn on the Whirlpool or Air system at any time if the jets or air inlets are not fully immersed in water. Doing so may cause water to spray outside the bathtub area.

1" –2" above the top jet



When exiting the bathtub, the water level will drop below the jets, resulting in water spraying out of the unit. To prevent this, you must turn the system OFF before exiting the bathtub.

● **SNY-371 Control panel operation:**

Lockout button

Water level protection

Left

Right

Screen

Confirm

ON/OFF

Operation :

1. ON/OFF insert the plug,press to switch on the power .The screen will show the temperature of water and the lamp will light up .Switch the system off by pressing

2.Surfing function :

Press “” or “” to select the Jet icon ,as shown to the right :

129°F

OK

129°F

To press OK for ON or OFF

Notice : If short of water,the "" will flicker ,water pump can not start .The pump will be turned off automatically every 60 minutes .

3.Water Temperature Instructions

Press “” or “” to select the heating icon. as shown to the right

129°F

OK

129°F

To press OK for ON or OFF

Notice:Select the HEAT button to simultaneously activate the massage and constant temperature modes. When the water temperature reaches 104°F (40°C), the built-in heater will automatically stop heating. The built-in heater will only operate when the water temperature is at least 77°F (approx. 25°C). The constant temperature mode only raises the water temperature slowly and slightly. It is recommended to fill the bathtub with hot water at 100°F (38°C) in advance.

4.Bubble bath function

Press “” or “” to select the bubble bath icon, as shown to the right :

129°F

OK

129°F

To press OK for ON or OFF

Notice:It will be turned off automatically every 60minutes .

5,Lamp function

Press “” or “” to select the lamp icon ,as shown to the right:

129°F

OK

129°F

Color variable

(red → off → blue → off → green → off → sevendecoloralochroism → white)
Press “OK” once to turn off, press again to switch color

6,Lockout button

After 2 minutes of inactivity on the screen, the panel will be loc ked, and a lock icon will appear in the upper left corner. To unlock, gently touch the OK key with your fingertip.

Three piece three-jaw set faucet:
A. Hot water switch(Marked with letter H)
B. Cold water switch(Marked with letter C)
C.Switch (Marked with Icon of water inlet and shower head)

● Multi-function handheld shower with a backflow protector.

Rotate the shower head shell can adjust the water pattern as follow:
-inner water column
-middle water column
-external water column

SHOWER INSTALLATION

SHOWER HEAD INSTALLATION

Tmaking sure it lies flat.o install the shower head, follow the steps shown in Figure A.

First, remove the hose connector from the shower holder. Then, insert the rubber gasket into the hose connector, Finally, tighten the shower head and the hose connector securely.

● Water jets use:

Rotating the head of water jets clockwise/anticlockwise can adjust the water force; Turning the head of water jets up, down, left or right can adjust the angle of inflow.

Water jets

Hydro massage flow rate control switch

Rotate hydro massage flow rate control switch clockwise, then the water column strength smaller; rotate the knob anticlockwise, then the water column strength stronger. (Only for the model with hydro massage flow rate control switch)

● Drainage

1.Manual drainage

Rotate the cover clockwise to close the drain;
Rotate the cover anticlockwise to open the drain;
When the water is over the maximum water level, the excess water will be drained by overflow.

Care and Maintenance

Regular bathtub maintenance will keep it clean and working at its best. Pump and pipe circulation systems should be flushed before first use and on a monthly basis when product is under normal use. Below is the recommended cleaning procedure:

- 1.Do not run the jet massage system dry.
- 2.Fill the tub with hot water (about 104°F) 20 – 30 mm (0.9 – 1.2 inch) above the jets. Add 2 – 3 teaspoons of low foaming detergent, such as dishwashing machine detergent.
- 3.Turn on all the functions and run for 10 minutes.
- 4.Drain tub completely.
- 5.Fill tub with cold water above jets.
- 6.Turn on all the functions and run for 15 minutes.
- 7.Drain tub completely.
- 8.Clean the “suction cover” by removing any hair or lint.

Whirlpool Suction Cover/Strainer
Maintain regular cleaning of the suction cover/strainer

1. Rotate the suction cover to the left to detach it.
2. Remove any hair, lint, or debris present on the cover and housing.
3. Remember to reattach the cover in place.

WARNING! Please orient the cover/strainer with the small notch at the bottom. The gasket must be inserted into the groove of the cover/strainer before mounting it onto the suction fitting.

DANGER: RISK OF SEVERE INJURY OR DROWNING!

- a. Keep hair a minimum of 6 inches (152 mm) away from the suction fitting at all times

when the whirlpool system is operating. Individuals with shoulder-length hair should secure it close to their heads or wear a bathing cap.

- b. Do not operate the Whirlpool system with the suction cover/strainer removed! It is a safety device and must always be in place on the suction fitting to minimize the risk of entrapment.

potential hazard of hair and body entrapment.

Always implement countermeasures that help prevent freezing. You must empty the bathtub and the water in the pipe during winter use. If the pipes freeze, the pipes could rupture or equipment could become damaged.

Use no water other than standard tap water. The use of well water could cause corrosion, which could lead to leaks.

Notice

The bathtub should not be exposed to ultraviolet or bright light, otherwise aging could be accelerated, causing damage.
Keep the bathtub away from cigarette butts, hair dryers, and other heat sources, otherwise the product may be damaged due to high temperature deformation.

When not in use, please keep the bathtub well-ventilated and dry; avoid contact with corrosive substances; cut off electricity and cut off water supply.

To avoid other damage, please do not drop or strike the bathtub with hard objects. Doing so could crack or scratch the bathtub or cause leaks that damage or ruin household property.

When the product is at work, you cannot cut off any connection lines and split the bus master and control panel. Any part of the control panel and the bus master CAN NOT be split by the user. Doing so may cause product leakage, electric shock, or other accidents.

The ground fault circuit interrupter (GFCI) should be tested regularly. It is ideal to test before each use.

Notice

Use water or mild detergent to clean the product. Do not use acids, alkalis, chemical organic solvents, or acidic/alkaline cleaning agents. Otherwise, the bathtub will experience surface damage. When water or a neutral detergent cannot remove stains, use a clean cloth with a little alcohol to remove stains.

Plating parts maintenance: use cotton fabric to scrub.

Light scratches and dulled areas may be restored to original luster by coarse grinding using NO. 1200 waterproof sandpaper dipped in water. Then fne grind by using NO. 2000 waterproof sandpaper dipped in water. Finally, polish with a soft cloth and a polishing agent.

When not in use, please keep the bathtub well-ventilated and dry; avoid contact with corrosive substances; cut off electricity and cut off water supply.

Troubleshooting Guide

PROBLEMS	CAUSES	SOLUTIONS
Pump/motor and jets do not operate	1. No power to pump/motor 2. Water level does not reach high enough 3. Defective Pump/motor	1. Check for the power connections and the fuse in blue terminal box; Make sure control panel and pumps are connected to control box properly. 2. Inflow water until it reaches the minimum water level of the bathtub 3. Contact Empava for WARRANTY & SERVICE
Not all jets are functioning	• Jets are closed	1. Adjust the jets by rotating clockwise/anticlockwise 2. Contact Empava for WARRANTY & SERVICE
Water leakage from pump/motor	1. O ring is pinched or faulty 2. Screw nut is not tightened or connected properly	1. Replace the old ring 2. Tighten the screw nut and make sure it's in good connection 3. Contact Empava for WARRANTY & SERVICE
Water leakage from PVC pipes	The glass glue is not enough	1. Apply glass glue to seal it 2. Contact Empava for WARRANTY & SERVICE
Water leakage from drainage	1. O ring is pinched or faulty 2. Drain pipe is broken	1. Replace the old ring or the drainer 2. Replace the drain pipe 3. Contact Empava for WARRANTY & SERVICE
Water leakage from hardware	1. O ring is pinched or faulty 2. Defective control valve	1. Replace the old ring or faucet/showerhead 2. Replace the control valve under knobs 3. Contact Empava for WARRANTY & SERVICE
LED lights do not operate	• Loose connection	• Contact Empava for WARRANTY & SERVICE
Waterfall is not functioning	1. Massage is not selected 2. Waterfall control knob turns to OFF position 3. Debris stuck in the waterfall outlet	1. Turn on the massage function 2. Turn waterfall knob anticlockwise to the desired water flow 3. Clean out debris

Empava® APPLIANCES

PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.
Please have the following information available when you call/
email the Empava Customer Center:
• Proof of purchase (PO# or screenshot of order confirmation)
• Model number and serial number
• A clear and comprehensive description of the issue

IF YOU NEED SERVICE: Empava Customer Center
Email: support@empava.com
Address: 458 Parriott PI W
City of Industry, CA, 91745

Website: https://empava.com
Call: 888-682-8882 Monday – Friday from 9am – 5pm PST

WHAT IS COVERED	WHAT IS NOT COVERED
-----------------	---------------------

TWO YEARS WARRANTY (PARTS)

Empava offers a two-year warranty on parts for the following categories: induction cooktop, gas cooktop, electrical oven, pizza oven, fre glass, juicer, range hood, wine cooler, beverage refrigerator and toilet seat

TWO YEARS WARRANTY (PARTS & LABOR)

Empava offers a two-year warranty on both parts and labor for the following categories: gas oven and gas range.

THREE YEARS WARRANTY (PARTS & LABOR)

Empava provides a three-year warranty on both parts and labor for the following categories: freestanding tub, massage tub, and walk-in tub.

This limited warranty is valid for products that are either purchased brand new from an authorized Empava dealer or directly from Empava.

The effective date of the warranty commences from the date of original consumer purchase. If the appliance is installed, operated, and maintained in accordance with the user manual, Empava will provide parts at no cost to rectify any defects in materials and workmanship that were present at the time of purchase. Alternatively, at its sole discretion, Empava may replace the product. In the event of product replacement, the warranty for the replacement product shall be valid for the remaining term of the original warranty period.

DISCLAIMER OF IMPLIED WARRANTIES

IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. Some states and provinces do not allow limitations on the duration of implied warranties of merchantability or fitness, so this limitation may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.

DISCLAIMER OF REPRESENTATIONS OUTSIDE OF WARRANTY

If you want a longer or more comprehensive warranty than the limited warranty that comes with this major appliance, you should ask Empava or your retailer about buying an extended warranty.

LIMITATION OF REMEDIES; EXCLUSION OF INCIDENTAL AND CONSEQUENTIAL DAMAGES .

HEREIN, EMPAVA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.

WARNING!
CALIFORNIA RESIDENTS
Cancer and Reproductive Harm

AVERTISSEMENT!
RÉSIDENTS DE CALIFORNIE
Cancer et Dommages à la Reproduction

¡ADVERTENCIA!
RESIDENTES DE CALIFORNIA
Cáncer y Daño Reproductivo

www.P65Warnings.ca.gov

EMPAVA APPLIANCES INC.

Add:458 Parriott PI W
City of Industry, CA, 91745
TEL:(888)-682-8882

WWW.EMPAVA.COM